


QUOTE DI FORATURA - CAMPO DI APPLICAZIONE - PORTATE
FITTING HOLE DETAILS - APPLICATION RANGE - WEIGHT CAPACITY

CODICE Code		A	B	C	MAX ALTEZZA Height (mm)	MAX LARGHEZZA Width (mm)	PORTATA Weight Capacity (Kg)
1330PS/16	16"	192	384	400	800	1000	42
1330PS/18	18"	229.5	459	475	1000	1200	50
1330PS/20	20"	254.5	509	525	1200	1400	55

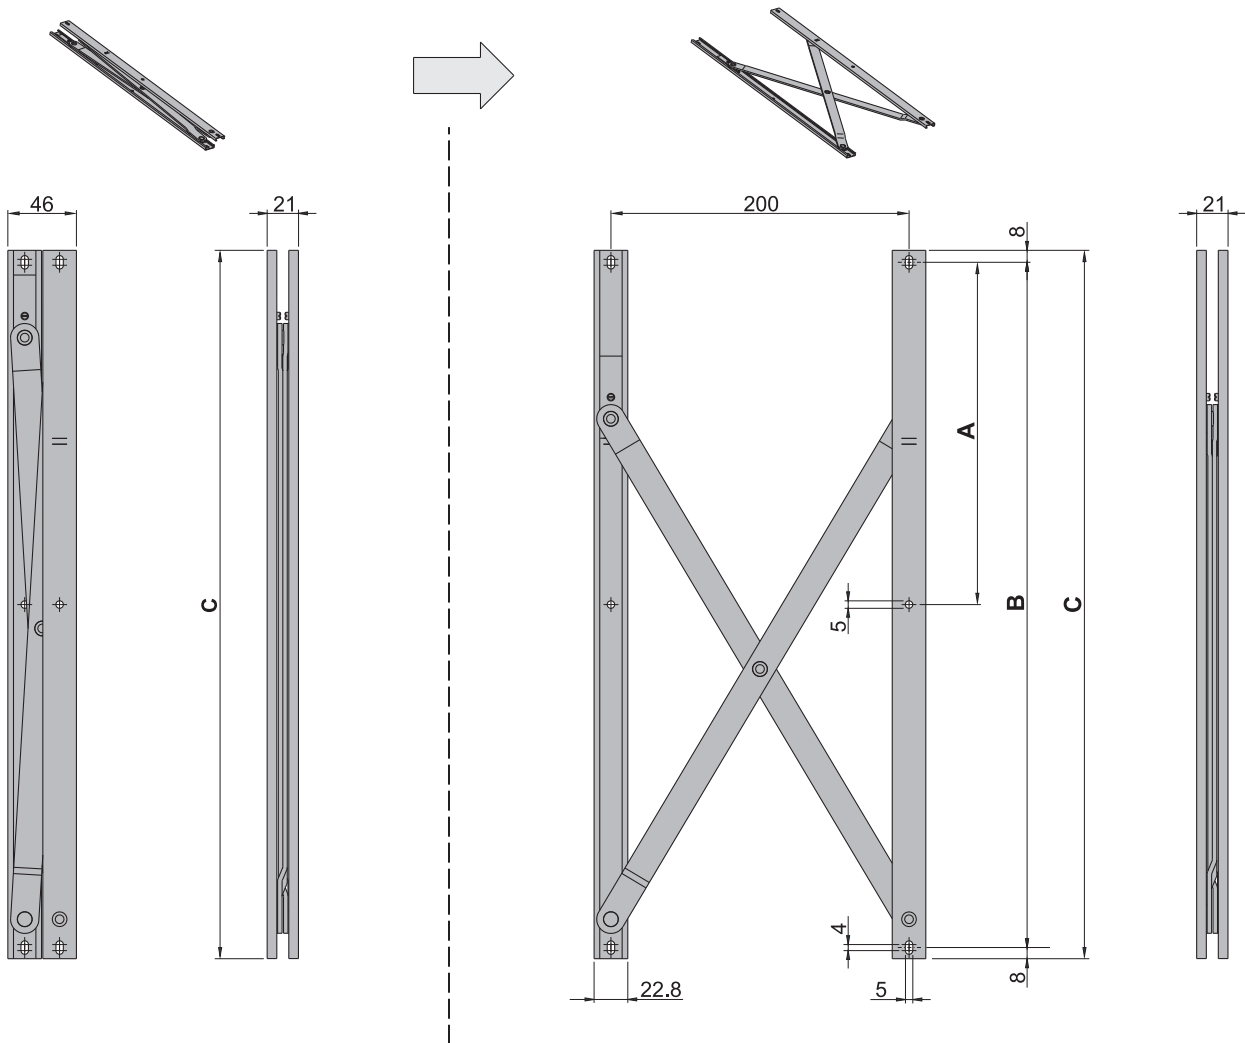

Avvertenze per l'installazione / Installation recommendations

- Il braccio frizionato dev'essere installato garantendo la sicurezza alla massima apertura.
 - Lubrificare con olio le parti in movimento e i perni dei bracci.
 - Imballare e fissare correttamente il serramento durante il trasporto per evitare danneggiamenti ai profili e ai bracci.
 - Dopo l'installazione del serramento assicurarsi della pulizia dei bracci e lubrificarli nuovamente.
 - Si raccomanda di pulire e lubrificare i bracci una volta all'anno. Controllare il serraggio delle viti.
- The friction stay should be installed in such a way as to ensure full safety at max. opening angle.
 - Oil the moving parts and rivets on the stays.
 - Pack the window and secure it firmly during transport so as to avoid risk of damage to the profiles or friction stays.
 - After installing the window, make sure that the friction stays are clean, then lubricate them again.
 - It is recommended to clean and lubricate the friction stays once a year. Make sure the fitting screws are tightly fastened.

